



**Before starting dis-assembly**, drain lines and suction housing of as much liquid as possible. A section of the piping at the discharge side of the pump should be easily removable to facilitate the replacement of rotor, stator, or gear joint parts. The recommended "Length of Piping" is as set forth in CLEARANCE TABLE NOTE "A".

**Continental Pump Company**



## Disassembly and reassembly of a Continental CG12 Progressing Cavity Pump

CLEARANCE TABLE			
MODEL		NOTE "A"	NOTE "B"
CONTINENTAL	MOYNO®	Length of Piping	Space Required
1CG8	SWG8	31"	7/8"
2CG8	2SWG8		
1CG10	SWG10		
2CG10	2SW10		
1CG10H	SWG10H		
2CG10H	2SWG10H		
1CG12	SWG12	37"	1"
2CG12	2SWG12		
1CG12H	SWG12H		
2CG12H	2SWG12H		

All Moyno® Part, model and identification numbers are listed for reference purposes only. Continental Pump Co, Inc. is not affiliated with or a representative of neither Moyno® nor its parent company. Please contact one of our application specialists at (636)-456-6006 M-F 8AM-5PM CST for more information.

1. Remove this section of piping and the discharge flange, #10
2. Remove clamp bolts from stator support, #38. Then pull the top half of the stator support from the stator, #21.
3. Place temporary support, such as a block of wood, under suction housing, #2, and remove bottom half of stator support, #38.
4. Remove bolts from adapter flange, #12. Then pull assembly of stator, #21, and adapter flange, #12, from rotor, #22.
5. Remove adapter flange, #12, from stator, #21, and remove adapter gasket, #79. This is as far as the pump should be dis-assembled for replacement of the stator only. To reassemble, use new stator and reverse the above procedure.
6. Remove shaft screws, #134, from drive shaft head, #97, and pull driveshaft head from driveshaft, #26. **NOTE:** If pump is directly coupled to the driver, a space should be left between the end of the driveshaft and the motor shaft to allow removal of the driveshaft head. This can normally be done through the use of radial removable

couplings. The "Space required" is as set forth in CLEARANCE TABLE NOTE "B".

7. Remove "O" ring, #110, from driveshaft head, #97.
  8. Push on the discharge end of the rotor so that the connecting rod nut, #192, will project from the driveshaft, #26.
  9. Remove connecting rod nut, #192, shaft lock washer, #133, front thrust plate, #198, shaft keys, #202, gear joint, #195, ring gear, #196, rear thrust plate, #199, spacer, #29, connecting rod cover, #87, from the connecting rod, #25.
- NOTE:** When re-assembling, pack cavity in driveshaft head, #97, gear teeth, and spherical bearing surfaces with anti-friction bearing grease (Shell, Alvania, EP-O, or equivalent).
10. Pull rotor and connecting rod assembly from pump.
  11. Remove rotor head seal retainer screws, #114, from head ring, #200. Pull head ring over contour of rotor, #22.
  12. Pull gear joint shell, #197, from rotor, #22, and remove O-ring, #110 from rotor. This is as far as the pump should be dis-assembled for replacement of the rotor. Use a new rotor and stator. Reverse the above procedure to re-assemble.
  13. Remove gear joint shell, #197, from connecting rod, #25, by pulling it off the opposite end of its normal position.
  14. Remove connecting rod nut, #192, shaft lock washer, #133, front thrust plate, #198, shaft keys, #202, gear joint, #195, ring gear, #196, rear thrust plate, #199, spacer, #27, connecting rod cover. When re-assembling, pack cavity in rotor, #22, gear teeth, and spherical surfaces with anti-friction bearing grease (Shell, Alvania, EP-O, or equivalent).
  15. Remove screws from the bearing cover plate, #34, which allows removal of the bearing cover plate and the thrust bearing grease seal, #62.

### Continental Pump Company

29425 State Hwy B | Warrenton, Missouri 63383 | Tel: 636-456-6006 | Fax: 636-456-4337 | Email: [sales@con-pump.com](mailto:sales@con-pump.com)  
[www.continentalultrapumps.com](http://www.continentalultrapumps.com)



## Disassembly and reassembly of a Continental CG12 Progressing Cavity Pump

16. Remove driveshaft head, #97, from driveshaft, #26. We recommend using a press for the removal of the driveshaft, #26 and bearing assembly from the bearing housing, #5. If press is not available you can insert a rod or bar inside driveshaft from packing end and drive ball bearing and shaft assembly out of the bearing housing, #5. Slinger ring, #27, is removed from driveshaft during removal of shaft from bearing housing.
17. To dis-assemble the driveshaft assembly, remove bearing lock nut, #58, and bearing lock washer, #59. Then press off bearing, #29, bearing spacer, #33, and bearing, #30. When re-assembling, bearings should be packed with anti-friction bearing grease (Shell, Alvania, EP-O, or equivalent).
18. Remove packing gland, #41, packing gland bolts, packing, #42, lantern ring, #57, and packing washer, #65. Remove radial grease seal, #61, from the grease seal retainer, #63, out of the main body casting, #2. Remove thrust bearing grease seal, #62, from bearing cover plate, #34.
19. To re-assemble, reverse the above procedure. When inserting packing, make sure each ring is lubricated and that the ends are staggered so that no two adjacent rings have their ends in the same position.

### **Continental Pump Company**

29425 State Hwy B | Warrenton, Missouri 63383 | Tel: 636-456-6006 | Fax: 636-456-4337 | Email: [sales@con-pump.com](mailto:sales@con-pump.com)  
[www.continentalultrapumps.com](http://www.continentalultrapumps.com)