



CPML Pump End Kit Installation (CPML15-44K)

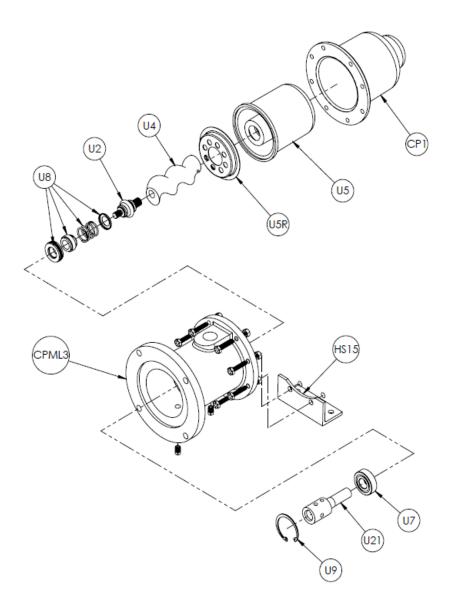

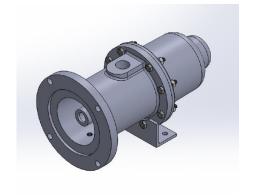

These kits are preassembled for a convenient "Bolt and Go" installation to any C Face Motor of your choice. Our unique feature makes this a fast and easy way to perform maintenance on our CPML Pump. Available with horizontal or vertical suction housings.

- 1. Stand the motor or the driver of the pump vertically with the shaft up.
- 2. Apply small amount of grease to the shaft and keyway.
- 3. Slide female motor coupling and pump assembly onto the male motor shaft or driver. Be sure to align the keyway in the female motor coupling, #U21.
- 4. Align the C-Face mounting holes with the discharge port being in the top or vertical position.
- 5. Tighten down the pump assembly with the 4 bolts and lock washers that are supplied in the kit. **NOTE:** It may be necessary to loosen the 2 bottom feet bolts, #HS, to level both the pump and motor/driver, then retighten.
- 6. Follow rotation arrows on discharge housing to pump does not unthread on startup.